

myinking® Tab

A5A10

User Manual

Precautions

1. Please carefully read the manual before using the device for proper usage reference.
2. Use proper cleaning tool and unplug the Tab before cleaning
3. Refrain from using sharp and point objects on the Tab surface to avoid cuts and scratch on the tab
4. Avoid direct exposure on liquid and strong sunlight to prevent any damage on the product
5. Please unplug Tab when no longer in use to save electric usage
6. Please do not disassemble Tab and Pen by yourself. By the doing so, device might generate heat, ignition, Electric shock, or other damage including human injury. Disassembling the product will invalidate warranty
7. Do not insert any foreign object inside the product as it may cause malfunction and electronic shock
8. The pen is rechargeable. Please use a proper charging cord when charging the pen. Please charged the pen as soon as necessary to prevent damage on lithium battery
9. When changing the Pen Nib, please be careful not to break the Nib. Use the provided Pen Nib Clip in pulling out the nib to be replace then slowly insert the new nib.
10. For product malfunction, please immediately contact our nearest distributor for support or email us at inquiry@myinking.com

Table of Contents

1: Product Introduction.....	4
1.1 Inking Tab A5 Introduction	4
1.2 Morgan Whiteboard Shortcut Keys (Photo)	5
1.4 Windows 10 Shortcut Keys	5
1.5 Pen (Photo)	6
1.6 Other Accessories	8
2: Connection and Driver Installation	8
2.1 USB Connection	9
2.2 Driver Installation.....	9
3: Basic Operation.....	12
3.1 Using the Pen	12
3.2.1 Charging the Pen.....	8
3.2.2 Pen Nib Replacement.....	7
4: Product Specification	14

1: Product Introduction

1.1 Inking Tab A5 Introduction

Welcome to Morgan Touch Inking Tab A5 user family. This Tab is a unique all in one combination of graphics pad, sign pad, mouse pad, touch pad, keyboard and mouse, and lapboard. Unlike a regular graphics or sign pad, Inking Tab A5 is equipped with Smart Hot keys specifically designed for Power Point Presentations and Digital Whiteboarding. It is also automatically link to your MS Office applications (Office, Excel, PPT, Whiteboard and One Note). By pointing your pen on the assigned hotkeys, you can call out these applications in an instant including Skype, Zoom, Windows Teams, Google Meets and Web Ex. You can also control the volume of your speakers and Maximize, Minimize, or close a window screen using the hotkeys assigned for this function. Browse through your websites by sliding the pen up and down or using scroll up and down button.

Inking Tab A5 also supports various drawing and sketching applications like Photoshop and AI. Our pen is equipped with 2048 pressure level producing the exact digital illustration of your handwriting strokes. To further understand this product, please read the manual carefully and enjoy using our Inking Tab A5.

Main Components



A5 Size EMR Tab





Micro USB Cable




Morgan Touch EMR Rechargeable Pen

1.2 Inking Whiteboard Shortcut Keys

inking

-  Screen Annotation
-  Whiteboard
-  Close
-  Red Pen
-  Green Pen
-  Blue Pen
-  Black
-  Eraser
-  Add Page
-  Import Photo
-  Export File
-  Print

Note: All functions of the whiteboard can be access either from the Tab hotkeys or from the Software interface

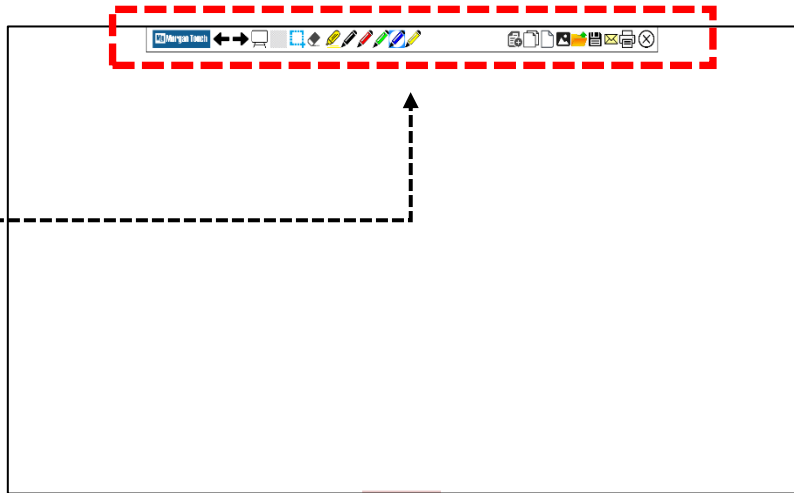


1.3 PPT Shortcut Keys







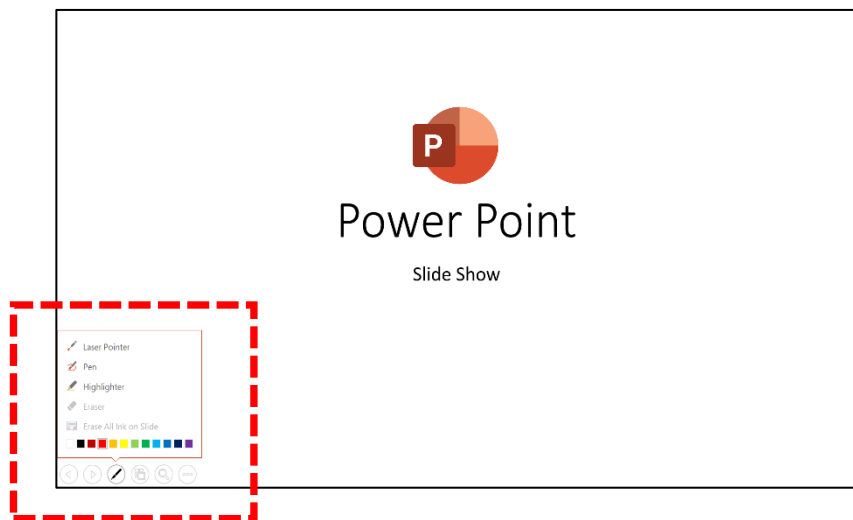











PPT

-  Open File
-  Close
-  Marker Pen
-  Laser Pen
-  Eraser
-  Previous Page
-  Next Page

Note: Control your Power Point full screen slide show using the PPT Inking Tab Hotkeys




1.4 Windows 10 Shortcut Keys

WIN10			
	Microsoft Word		Close Window
	Microsoft Excel		Maximize Window
	Microsoft PowerPoint		Minimize Window
	Microsoft One Note		Page Up
	Microsoft Whiteboard		Page Down
	Skype		Keyboard
	Windows Teams		Volume Down
	Google Meet		Volume Up
	Web Ex		
	Zoom		

Important Reminder: Inking Tab A5 does not own any of the following programs mentioned above. Please download and install the said programs separately from their respective developers' website.


1.5 Pen (Photo)

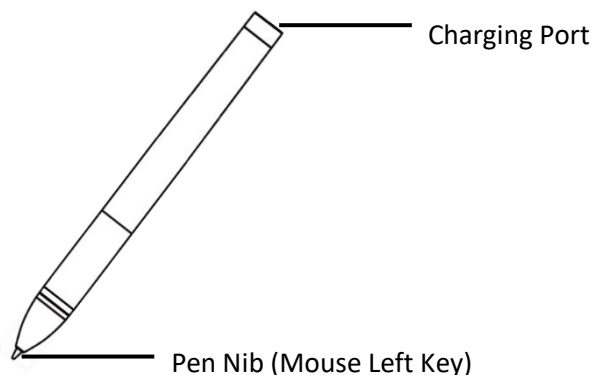

✧ Pen Nib Replacement

The nib will wear out after a continuous use, you need to replace the nib by then.


Replacing the Pen Nib / 更換筆芯

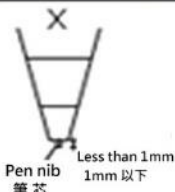

Pen nib
筆芯


Less than 1mm
1mm 以下

Replace the pen nib when it is worn down or its length is reduced to 1mm or less.
筆芯磨損時(1mm以下)·請如圖所示更換筆芯·

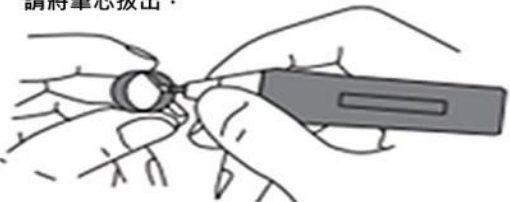

Remove the pen nib.
請將筆芯拔出·

Use a pair of tweezers (or similar tool) to pull the nib out of the pen.
請使用筆芯夾(或類似夾子)將筆芯拔出·




Insert a new nib.
插入新筆芯·

Insert the new nib, firmly pushing it in until it stops.
請確實將筆芯插到底·

✧ Charging the Pen

1. When the battery runs out, charge the pen using the Micro USB Cable.
2. Insert one end of the charging cable into the rear end of the stylus charging port, then other end of the charging cable to a computer, power supply or power bank.

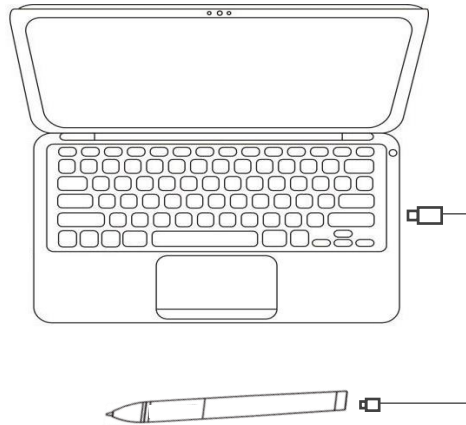


1.6 Other Accessories



USB OTG
Adaptor - Type C



USB OTG
Adaptor - Micro
USB

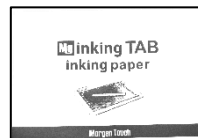

Inking Paper
(write on paper with *Inking
Pen Nib)

 


Pouch bag

Accessory in Pen box



Pen Nib Clip




Standard Pen Nib x 2

***Inking Pen Nib x 1**

2: Connection and Driver Installation


2.1 USB Connection

Connect Tab to your PC using Micro USB Cable (see below photo).

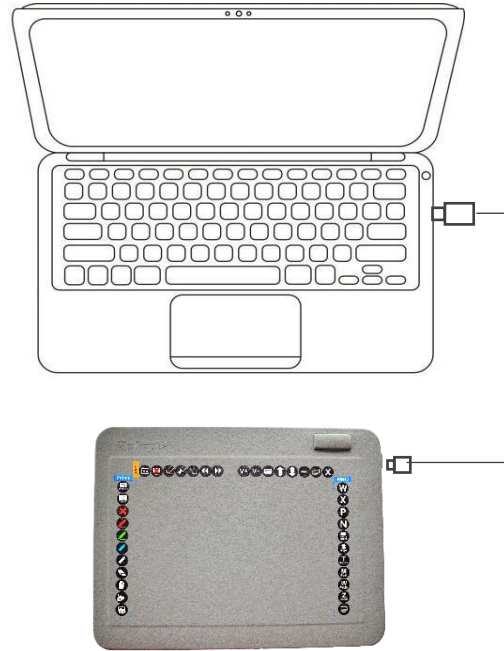


2.2 Driver Installation

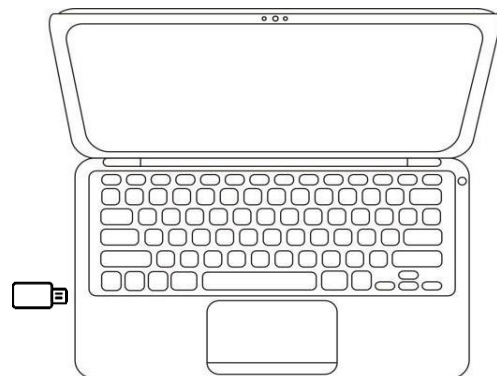

1. Install Driver “TouchSetup_WhiteBoard-1.0.6039.3Patch5-20210128” found inside the USB drive that comes with the packed. You may also ask for the copy of the software installer from our local agent nearest you.




Name	Date modified	Type	Size
Inking A5 User Manual English Ver 1.0_R1	9/14/2020 9:50 AM	Adobe Acrobat Docu...	798 KB
TouchSetup_WhiteBoard-1.0.6039.3Patch5-20210128	1/30/2021 6:38 PM	Application	22,482 KB

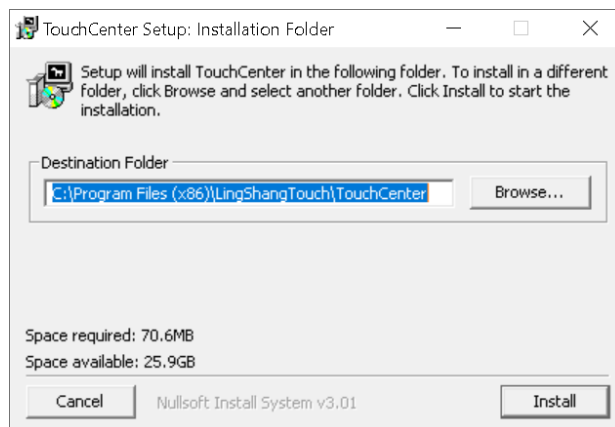
2. Run Touch Setup Driver and click install. Driver will install automatically. Driver will automatically start every time you turn on your computer.



3. After installing, Touch Pen center logo will show up on the bottom right side of your taskbar . When device is not connected, its color black, while it turns white after you have connected the device . Touch Pen Center automatically starts as soon as you turn your computer on.

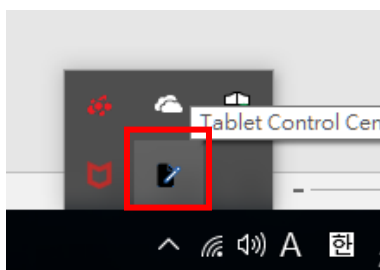

Device not Connected

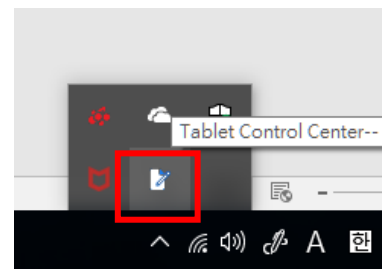




Device successfully connected

3: How to use the Tab

3.1 After installing the driver, the Tab is ready for use. Point the pen on the desired key to activate related software.

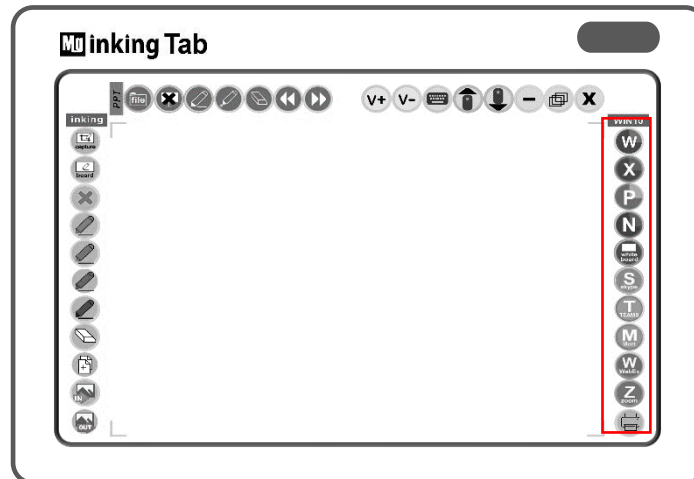Note: Related software has to be installed separately in-order for the hotkey to function.




3.2: To activate Inking Whiteboard, click [ Whiteboard icon located in the “Inking” side. A side bar menu will then show up on the right-hand side of your screen. This indicates that Morgan Whiteboard is already running. Click [] again to open whiteboard window. Click on the other buttons to change your Pen Color, Eraser, Add Page, Insert Image, Screen Shot and Save and your work.

1




2

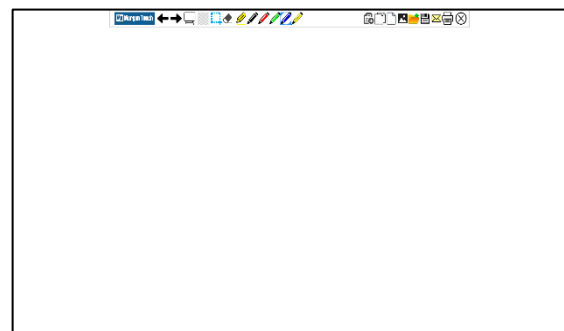


Basic Operation

✧ Using the Pen


1. To register a left click, tap the pen tip on surface at once.
Tap on the hotkeys at once to activate function assigned

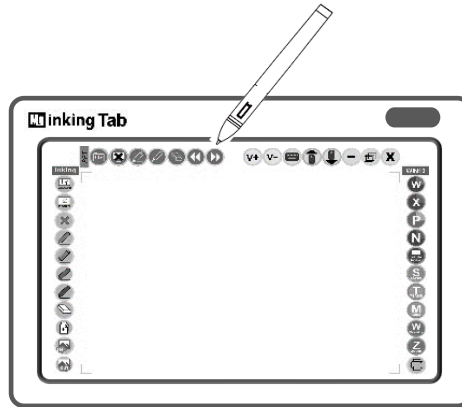


2. To Move objects or write on your screen, Tap pen tip on the surface and slide to your desired direction.

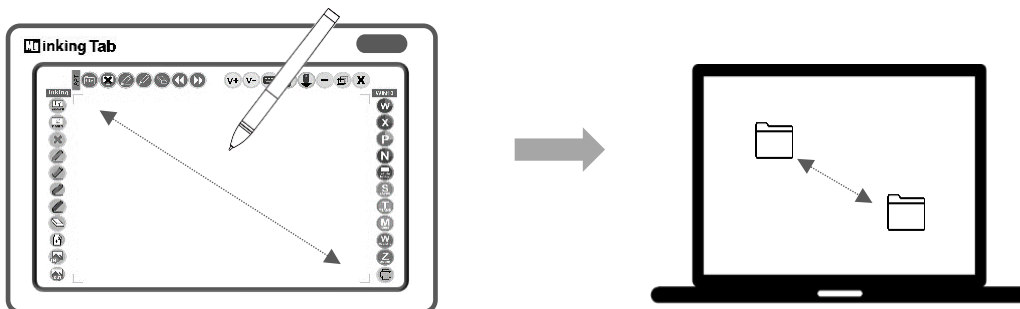

3. To open folder or application, double tap on the icon to open folder or run application.

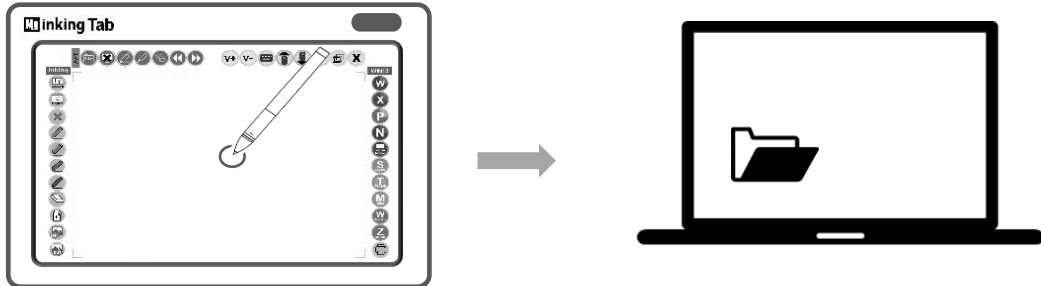

4. To activate right click button, tap pen tip on any location and stay steady for at least 2 seconds.

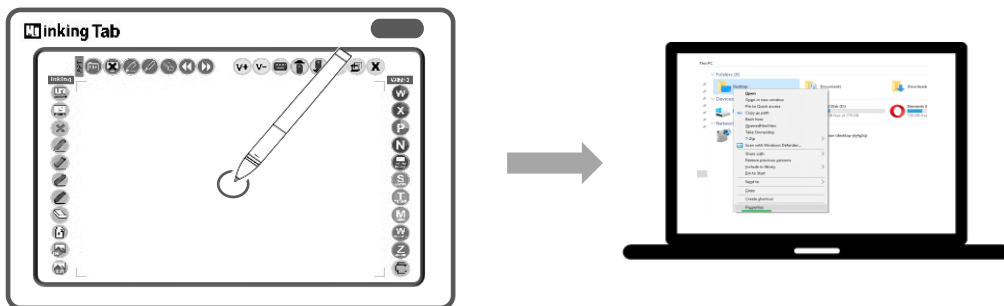

4: Product Specification

Technology	Electromagnetic Resonance
Resolution	< 0.01mm (4096 LPI)
Pressure Resolution	4096 levels @ full scale
Coordinate Accuracy	±0.5mm (Center Area) ±1.0mm (Edge Area)
Coordinate Deviation	When Tilting Pen ±1.0mm (tilted ±45° from vertical) (see Note)
Detectable Height	5mm above the surface
Position Report Rate	≥260 pps
Digital pen	EMR digitizer pen with cap
Active Area	136 x 217 mm
Interface	USB interface (micro USB)
Power	Power by USB 5V
Operation System	Windows 7, Windows 10 and above Android 6.0 and above
Morgan Inking	Morgan Inking tab software Morgan Inking tab driver
Windows software	<ul style="list-style-type: none"> ● Supports Windows Inking and Office Inking ● Supports digital sign ● Supports Wintab standard for artwork design, such as Photoshop, CorlDraw, Illustrator, SAI..... ● Hotkey functions support Office 2013, Office 2016 and Office 2019, Office 365 and above.

Above spec are for reference only. Please check the product detail or coordinate with your local supplier for more product information or service.

myinking Tab

link & control powerpoint slideshow

Inking Area writing & drawing

link & control morgan inking functions

link & control window functions

link & open supported softwares

WIN10

word excel powerpoint OneNote Whiteboard Skype Teams Meet WebEX Zoom Printer

ink inking file end show red pen laser pen eraser page up down volume up down keyboard scrolling up down min max windows close

Morgan annotate Morgan Whiteboard Close & back to Window Red pen Green Pen Blue Pen Black Pen Eraser Add Page insert image, PPT, inking file image out

- Notes:
- (1) Designed for Windows 10, Office 2013 and above
 - (2) It's a smart link toolbar that activates supported softwares installed in your PC
 - (3) Each program, name and icon belong to its own company